



REMOVAL AND INSTALLATION

1. Disconnect and isolate the negative battery cable(s) (Refer to 08 - Electrical/Battery System/Standard Procedure).
2. Using a standard window handle tool (2), release the handle clips (1) and remove the handle (3) from the window lift mechanism, if equipped with a manual regulator.

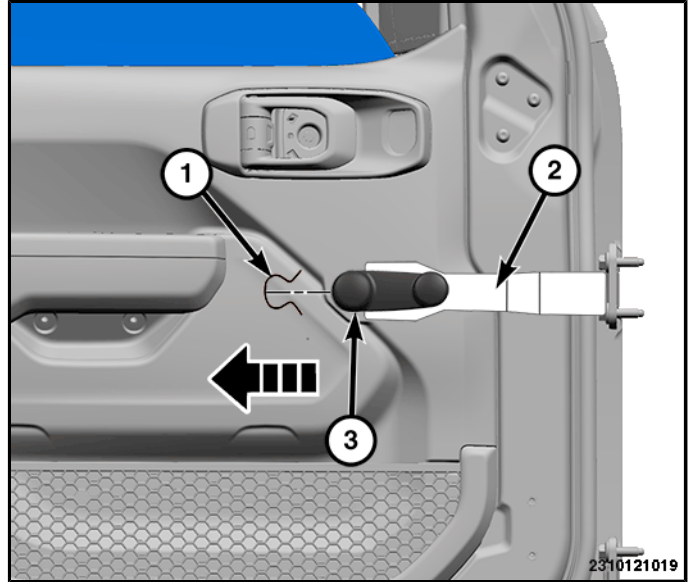


3. Using a small pick type tool or equivalent at the slot (2), remove the trim cover.
4. Remove the bolt (1).

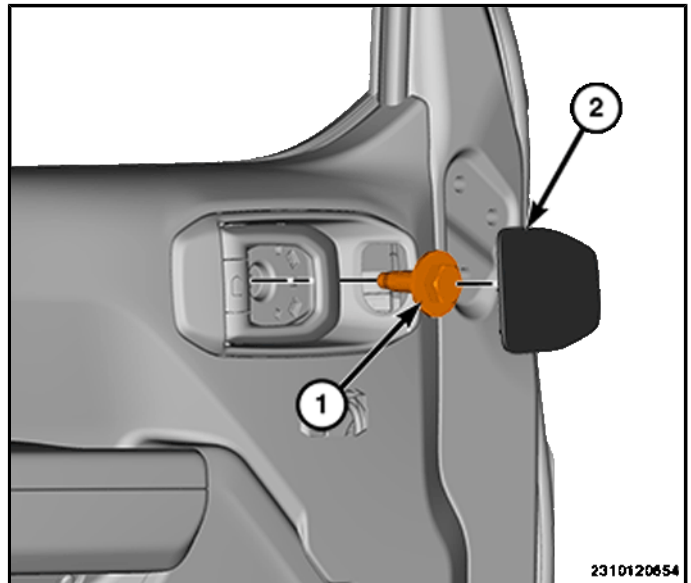


5. Remove the lower screws (1).


6. Remove the armrest bolts (2).

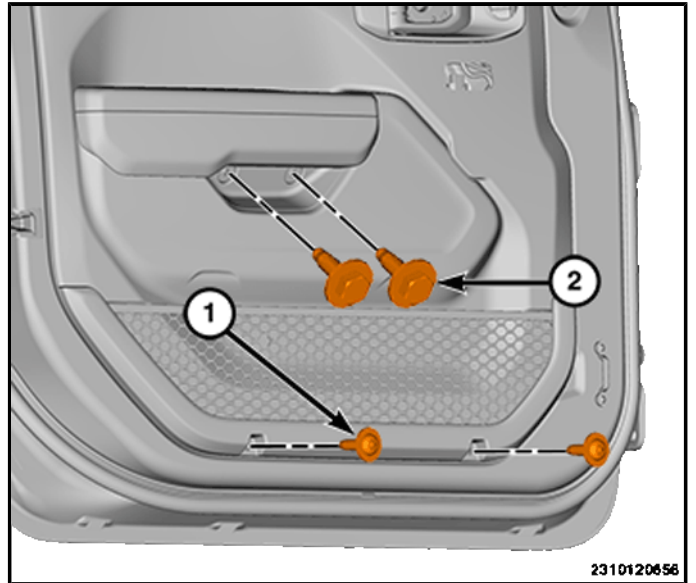


7. Using special tool [Remover, Trim C-4829A](#) , separate the eight push pin fasteners (1).

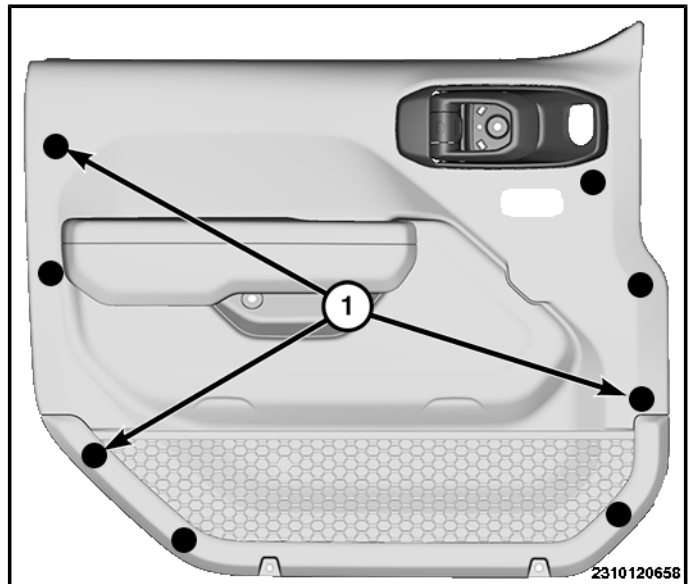

8. Separate the trim panel assembly (2) from the door (1).

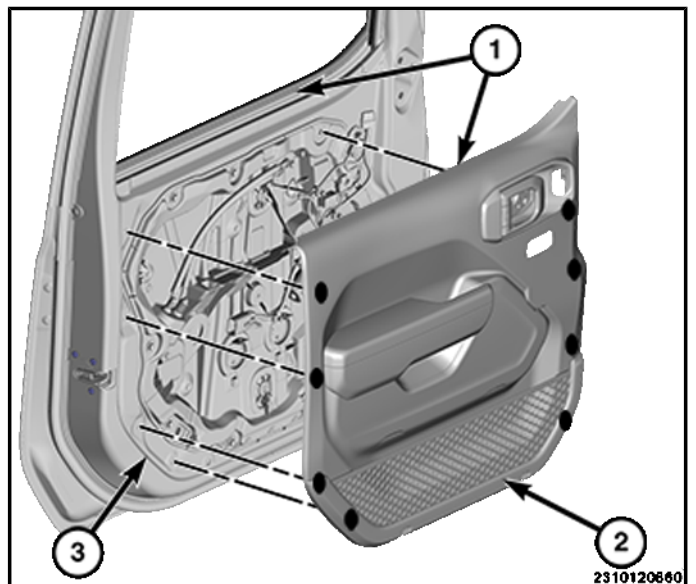


9. Disconnect the wire harness connectors as necessary.
10. Disconnect the interior handle cables (1) and remove the trim panel assembly.

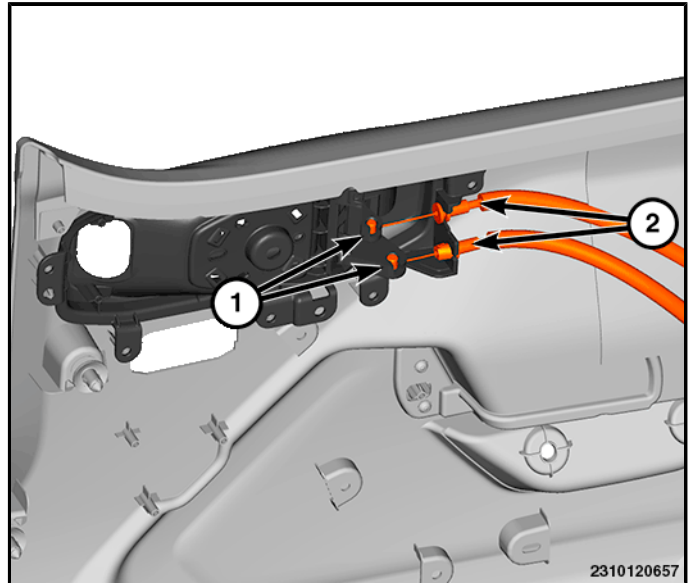


NOTE: Prior to installing the door trim panel, replace any trim panel retaining clips that may have been damaged during the removal process.

1. Connect the wire harness connectors as necessary.
2. Connect the interior handle cables (1) and seat the housing (2) fully.
3. Install the top of the trim panel over the inner door frame (1).
4. Position the trim panel assembly (2) back onto the door (3).

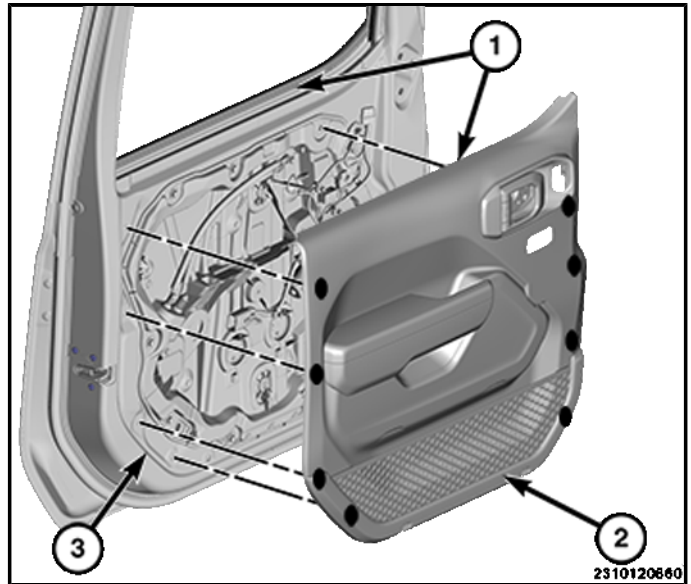


5. Seat the eight push pin fasteners (1) fully.

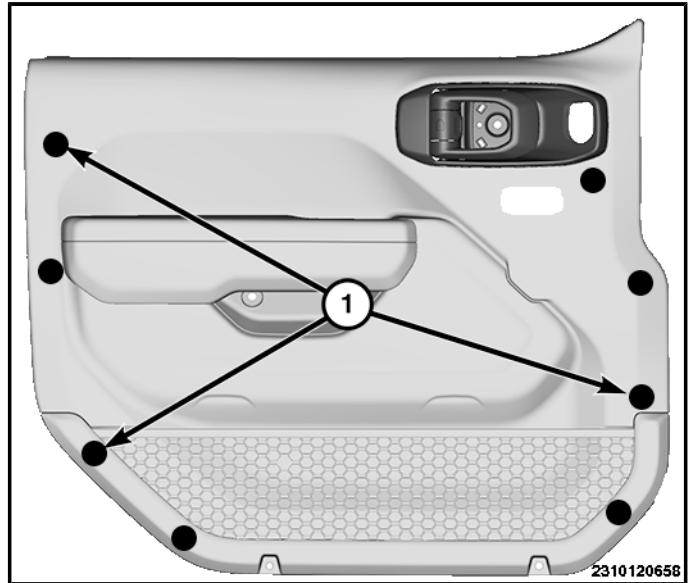


6. Install the lower screws (1).

7. Install the armrest bolts (2) and tighten to the proper (Torque Specifications)..

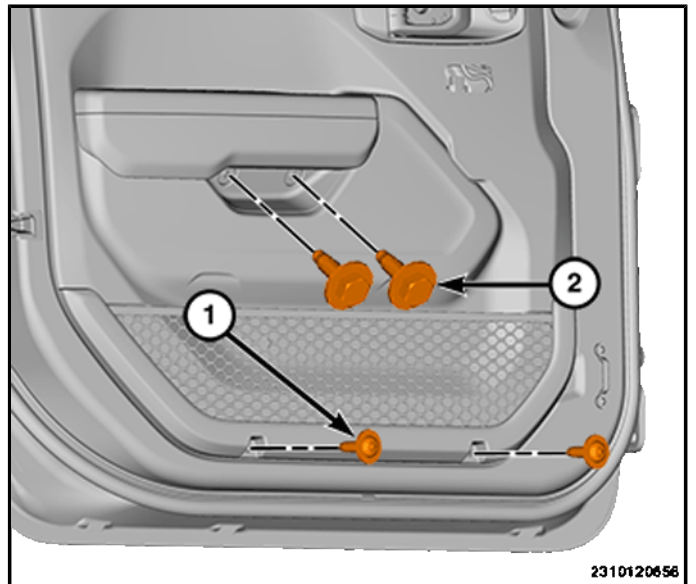


8. Install the bolt (1) and tighten to the proper (Torque Specifications).


9. Install the trim cover (2) and seat fully.

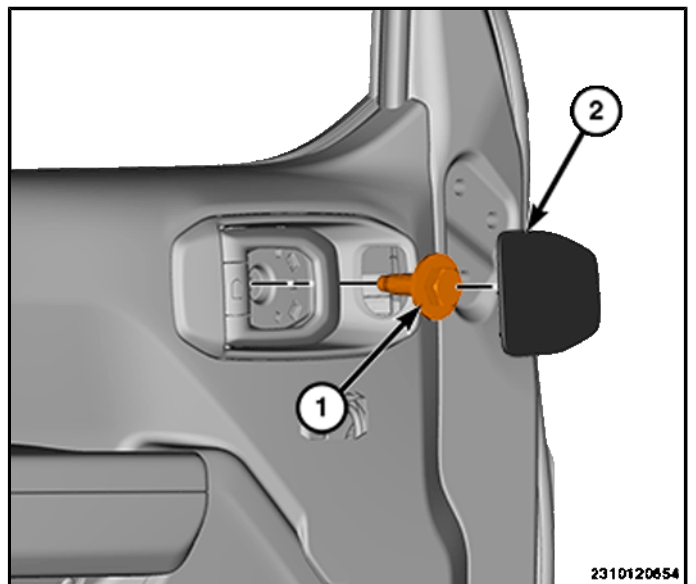

10. If equipped with a manual window regulator, position the window crank handle retaining clip (2) back into place on the handle post (1).

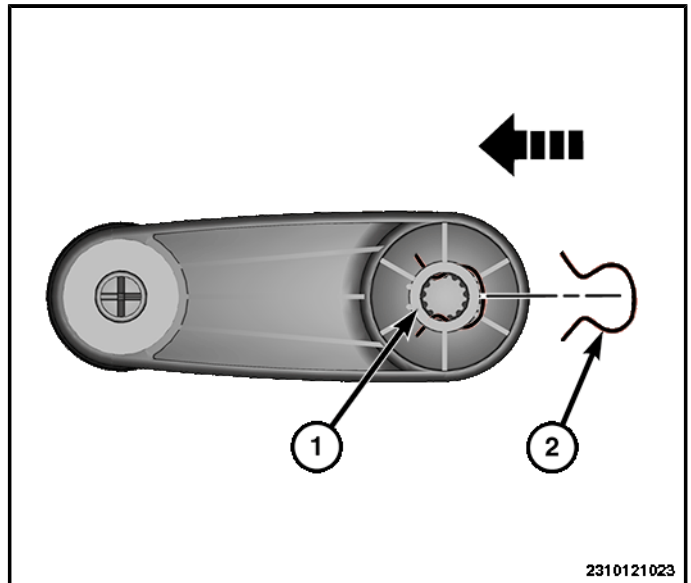

11. Position the window handle (2) back onto the post (1) and seat fully.

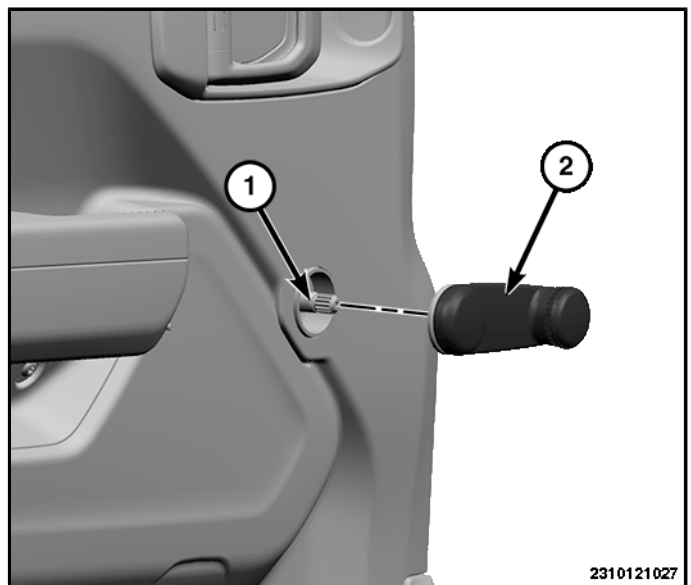

12. Connect the negative battery cable(s) (Refer to 08 - Electrical/Battery System/Standard Procedure).