



## REMOVAL AND INSTALLATION


1. Remove the carrier plate, (Refer to 23 - Body/Door - Front/PLATE, Carrier/Removal and Installation).
2. Remove the screws (3) for the run channel.
3. Separate the wire harness (1) from glass run and handle support (2).

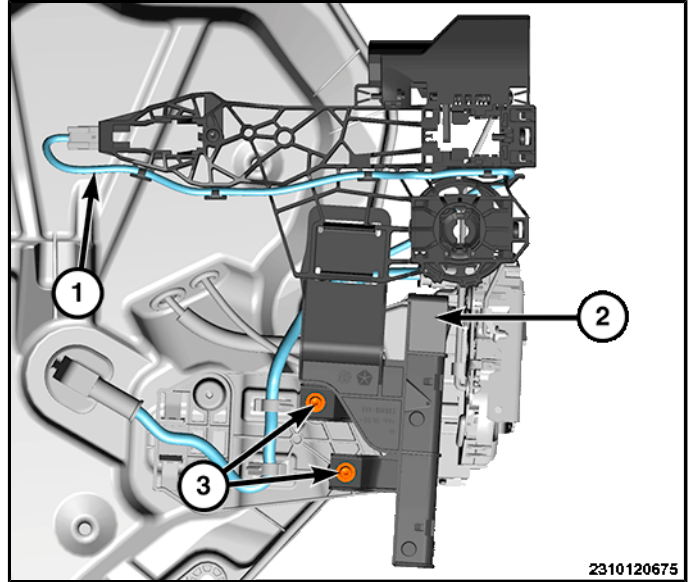


4. Disconnect the control rods (3).
5. Disconnect the wire harness connector (2).
6. Release the latch cover tabs (4) and remove the latch presenter (1).

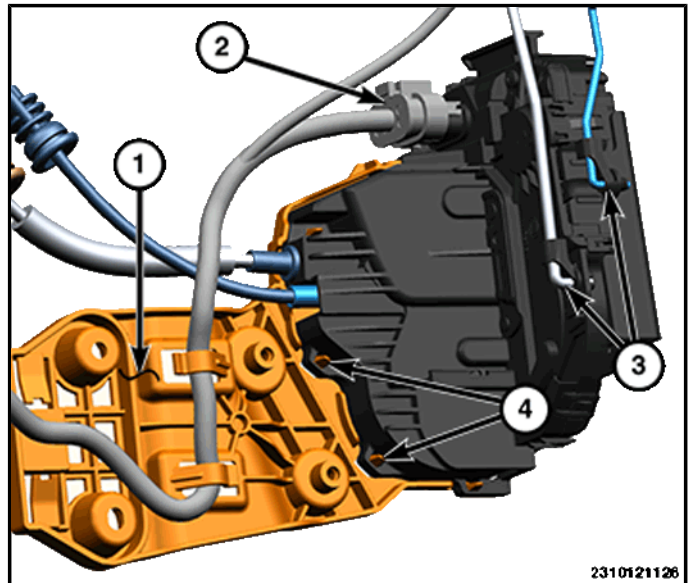


7. Disconnect handle and lock cables (2) and remove the latch assembly.

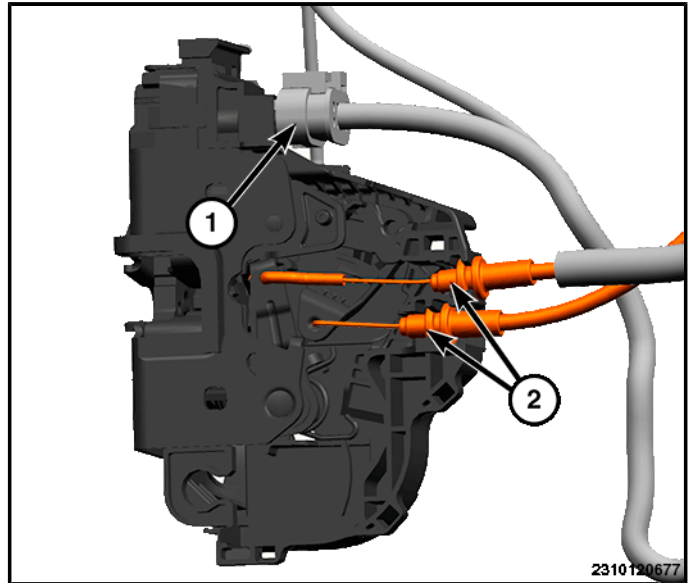

1. Connect the handle and lock cables (2) to the latch assembly.
2. Position the latch assembly onto the presenter (1) and seat the clips (4) fully.
3. Connect the wire harness connector (2).
4. Connect the control rods (3).

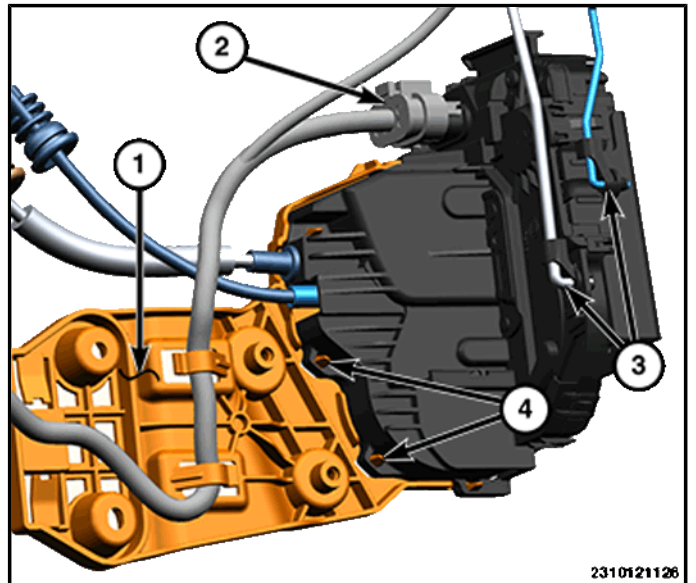

5. Secure the wire harness (1) onto the glass run and handle support brackets.
6. Install the brackets onto the carrier plate and install the screws (3)

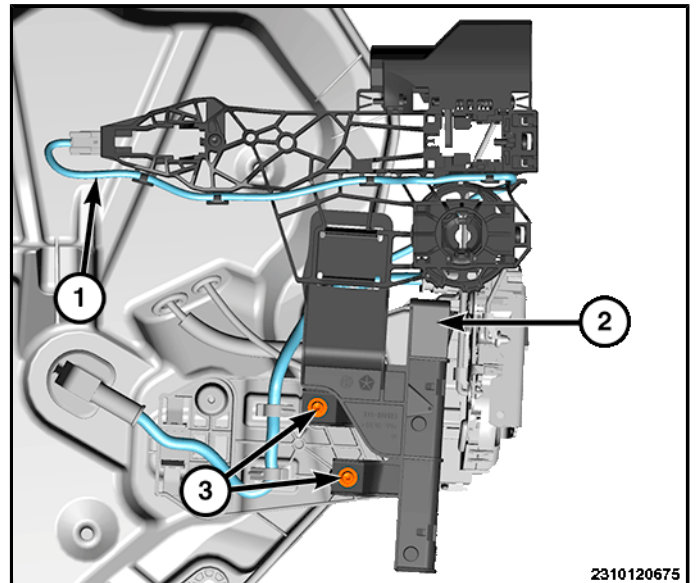

7. Install the carrier plate, (Refer to 23 - Body/Door - Front/PLATE, Carrier/Removal and Installation).